
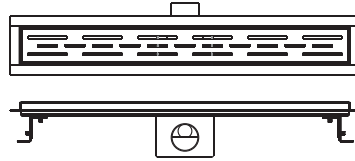


# Installation

## Shower Guide Gutter capacity 25 ltr p/min

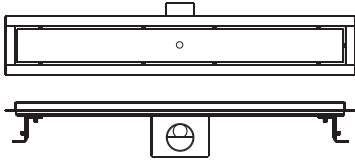

The shower can be poured into a new or existing shower be installed.  
The floor must be sufficient space for the siphon and the drainage area so that it can be properly connected.  
It should not stress the link otherwise you are likely to leak.  
Make love for very precise placement of the space available.  
Please note the included collar over this.  
The shower drain is available in 7 cm in lengths 30 -150cm.

### Materials needed for installation:

1. sandpaper
2. level
3. masking tape
4. degreaser
5. silicone

### Mounting:

1. Before the shower drain can be installed to remove the grate to prevent damage. If desired, the edge of the shower rail on the top with tape are taped for protection.
2. Make sure when inserting, walled, tiling and afkitten no mess (species etc.) in the siphon part comes. The advice is to stick to it temporarily.
3. To get an improved adhesion to the subfloor, it is recommended to the bottom and sides of a barn raising to paper and degrease.
4. Connect the gutter to the drain through the collar over 40 mm as far as possible over the outlet pipe of the flume sliding (the cuff ring ensures water tightness) and bonding with a 50 mm to 50 mm pipe.
5. The shower drain is grounded and this can be achieved through the grounding wire to be connected to one of the anchor
6. Then set the gutter level in all directions in the grout. This must be done carefully because if it does not, the siphon effect is not functioning optimally so that the sewer air may come in the bathroom.
7. Keep in determining the height of the shower drain into the thickness of the tiles.
8. In the tiling should be considered to be the compartmentalisation of the shower floor in the direction of the gutter. The tiles 1 mm higher than the gutter so all the water run off and no pool of water is formed.
9. After the tiling is applied to the connection with the tiles be sealed with an elastic silicone kit. Keep the kit to add width to the opinion of the kit manufacturer.  
The best effect is obtained when the joint edge uneven.
10. Cement, add, remove and carefully cured material with an abrasive pad.
11. The film of the grid only when removing the shower into service.

### Diagrammatic drawing

